









# TransTech System Accessories

## Standard Adapter kit 200-3100A: TransTech-3 Service Unit





The most common applications are listed below; other applications may apply.

PART & NUMBER	QTY	DESCRIPTION
 <p>060-1000</p>	1	1/4" Male Bump Tube Most Asian Vehicles
 <p>060-1100</p>	1	5/16" Male Bump Tube Most Asian Vehicles
 <p>060-1200</p>	1	3/8" Male Bump Tube Most Asian Vehicles
 <p>060-1300</p>	1	1/4" Open End Hose Most Asian Vehicles
 <p>060-1400</p>	1	5/16" Open End Hose Most Asian Vehicles
 <p>060-1500</p>	1	3/8" Open End Hose Most Asian Vehicles
 <p>060-0450</p>	2	Hose Clamp 7/8" I.D. max General Application

**Standard Adapter Kit 200-3100 A (Continued)**







PART & NUMBER	QTY	DESCRIPTION
 <p>060-1700</p>	1	<p>5/16" Flare, 7/16"-24 Domestic Vehicles Use with 062-0170</p>
 <p>060-1800</p>	1	<p>3/8" Flare, 5/8"-20 Domestic Vehicles Use with 062-0180</p>
 <p>060-3800</p>	1	<p>#5 SAE Flare European Vehicles Use with 061-0605</p>
 <p>062-0100</p>	1	<p>5/16" Male Flare-Deep Ford Vehicles Use with 062-2060 (or 062-0110 in old kits)</p>
 <p>062-2060</p>	1	<p>5/16" Female Flare-Deep Ford Vehicles Use with 062-0100 (Replaces 062-0110)</p>
 <p>062-0120</p>	1	<p>3/8" Male Flare-Deep Ford Vehicles Use with 062-1034 (or 062-0130 in old kits)</p>
 <p>062-1034</p>	1	<p>3/8" Female Flare-Deep Ford Vehicles Use with 062-0120 (Replaces 062-0130)</p>

**Standard Adapter Kit 200-3100A (Continued)**







PART & NUMBER	QTY	DESCRIPTION
 <p style="text-align: center;">080-0594</p>	1	<p><b>MQD X 3/8" FPT General Application Use with 080-0595</b></p>
 <p style="text-align: center;">080-0595</p>	1	<p><b>MQD X 3/8" MPT General Application Use with 080-0594</b></p>
 <p style="text-align: center;">061-0605</p>	1	<p><b>#5 SAE x #6 SAE Union European Vehicles Use with 062-0140 or 060-3800</b></p>
 <p style="text-align: center;">062-0170</p>	1	<p><b>5/16" Female Flare x 1/4" MPT General Application Use with 060-1700</b></p>
 <p style="text-align: center;">062-0180</p>	1	<p><b>3/8" Female Flare x 1/4" MPT General Application Use with 060-1800</b></p>

**Deluxe Adapter kit 200-3101B: TransTech Service Unit**

The most common applications are listed below; other applications may apply.





PART & NUMBER	QTY	DESCRIPTION
 <p>060-4200</p>	1	<p>5/16" Male Tube with Locking Quick Connect Dodge / Ford Vehicles Use with 060-1400</p>
 <p>060-4300</p>	1	<p>3/8" Male Tube with Locking Quick Connect Dodge / Ford Vehicles Use with 060-1500</p>
 <p>061-1550</p>	1	<p>1/2" Open End Hose Chrysler V-10 Diesel Use with 062-2040</p>
 <p>062-2040</p>	1	<p>1/2" Male Tube with Locking Quick Connect Chrysler V-10 Diesel Use with 061-1550</p>
 <p>062-2066</p>	1	<p>3/8" Male Tube with Locking Quick Connect G.M. 95 &amp; up Vehicles Use with 060-1500 (Replaces 062-2050)</p>
 <p>060-2600</p>	1	<p>16mm x 1.5 Bubble Flare European Vehicles Use with 060-2300 &amp; 060-2700 (not included or shown)</p>

**Deluxe Adapter Kit 200-3101B (Continued)**

PART & NUMBER	QTY	DESCRIPTION
 <p>060-2402</p>	2	<p>14mm x 1.5 Banjo Euro / Asia Vehicles Use with 060-2740</p>
 <p>060-2740</p>	1	<p>14mm x 1.5 Banjo Bolt Euro / Asia Vehicles Use with 060-2402</p>
 <p>060-2741</p>	3	<p>14mm Washer Euro / Asia Vehicles Use with 060-2740</p>
 <p>060-2742</p>	1	<p>14mm x 1.5 Cap Nut Euro / Asia Vehicles Use with 060-2740</p>
 <p>062-4301</p>	1	<p>Ford Retaining Clip 2003 &amp; up Navigator &amp; Excursion Locks the 060-4300 in position. Use with 060-1500</p>
 <p>080-0592</p>	1	<p>MQD X 1/4" FPT General Application Use with 080-0593</p>



## Optional Transmission Adapters

The following adapters are available for the TRANSTECH III. The adapters listed are not included with any configured adapter kits and are sold in sets.

PART & NO.	APPLICATION
 <p data-bbox="435 737 719 800"><b>062-2061 / Male Side</b> (O'Ring P/N: 080-3602)</p>	<p data-bbox="972 590 1438 758">Volvo 850 Application Volvo V-70 All Wheel Drive Male O-Ring Type / Flange Style Counterpart Adaptor: 062-2062 (Note: One O'ring)</p>
 <p data-bbox="428 1073 719 1104"><b>062-2062 / Female Side</b></p>	<p data-bbox="972 873 1438 1010">Volvo 850 Application Volvo V-70 All Wheel Drive Female receptacle / Flange Style Counterpart Adaptor: 062-2061</p>
 <p data-bbox="435 1356 719 1419"><b>062-2063 / Male Side</b> (O'Ring P/N: 080-2326)</p>	<p data-bbox="948 1209 1463 1346">Volvo 'S' Series Application Male O-Ring Type / Push Lock Style Counterpart Adaptor: 062-2064 (Note: Two O'rings)</p>
 <p data-bbox="444 1692 735 1724"><b>062-2064 / Female Side</b></p>	<p data-bbox="940 1524 1471 1640">Volvo 'S' Series Application Female Receptacle / Push Lock Style Counterpart Adaptor: 062-2063</p>




## Optional Transmission Adapters (Continued)

The following adapters are available for the TRANSTECH III. The adapters listed are not included with any configured adapter kits and are sold in sets.

PART & NO.	APPLICATION
 <p><b>062-2000 / Male Side</b> (O'Ring P/N: 080-3602)</p>	<p>BMW (Jaguar &amp; Mercedes) 12 mm Male O-Ring Type / Flange Style Counterpart Adaptor: 062-2005</p>
 <p><b>062-2005 / Female Side</b></p>	<p>BMW (Jaguar &amp; Mercedes) 12mm Female Receptacle / Flange Type Counterpart Adaptor: 062-2000</p>
 <p><b>062-2010 / Male Side</b> (O-Ring P/N: 080-3402)</p>	<p>BMW (Jaguar &amp; Mercedes) 10mm Male O'Ring Type / Flange Style Counterpart Adaptor: 062-2015</p>
 <p><b>062-2015 / Female Side</b></p>	<p>BMW (Jaguar &amp; Mercedes) 10mm Female Receptacle / Flange Style Counterpart Adaptor: 062-2010</p>





## Optional Transmission Adaptors (Continued)

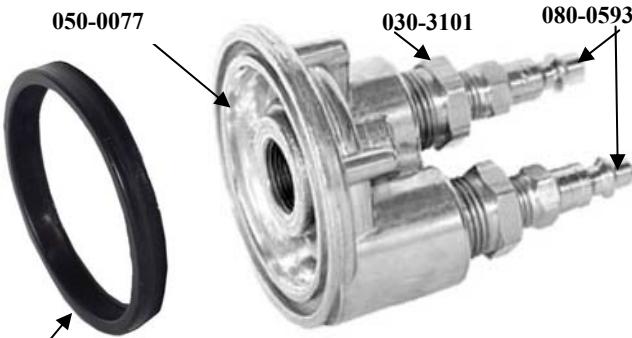


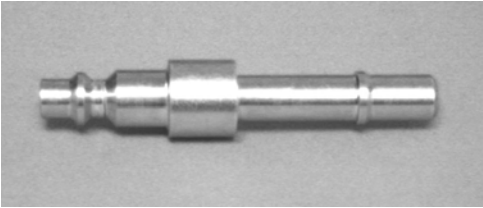
The following adaptors are available for the TRANSTECH III. The adaptors listed are not included with any configured adaptor kits and are sold in sets.

PART & NO.	APPLICATION
	<p>ALLISON 1000 DURAMAX Female O-Ring Type / Flange Style Counterpart Adaptor: 062-2069</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p><b>062-2068 / Female</b> (O'Ring P/N: 080-6014)</p> </div>
	<p>ALLISON 1000 DURAMAX Male Receptacle / Flange Type Counterpart Adaptor: 062-2068</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p><b>062-2069/ Male Side</b></p> </div>
 <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p><b>062-2065</b></p> </div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p>Note: Pull O'Ring from oil filter &amp; install in the adaptor.</p> </div>	<p>ADAPTOR for SATURN with SPIN-ON TRANSMISSION FILTER 062-2065</p> <p>Note: O'Ring <b>not</b> included with adaptor. Please remove o'ring from the old filter and install in the adaptor.</p> <p>Note: The center hole is <math>\frac{3}{4}</math>" ID x 20 thread pitch.</p>
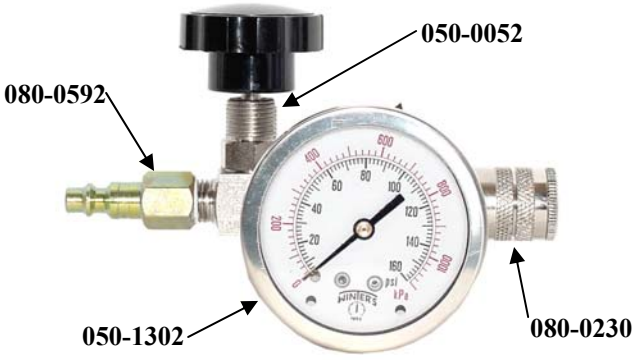
## Optional Transmission Adaptors (Continued)

The following adaptors are available for the TRANSTECH III. The adaptors listed are not included with any configured adaptor kits and are sold in sets.

PART & NO.	APPLICATION
	<p>Low Flow Transmission Pressure Adaptor</p> <p style="border: 1px solid black; padding: 5px; display: inline-block;"><b>200-6100</b></p> <p style="border: 1px solid black; padding: 5px; display: inline-block;"><b>For “high” flow applications, reverse the male &amp; female couplers</b></p>
 <p style="text-align: center;"><b>062-0140</b></p>	<p style="text-align: center;"><b>#6 SAE Flare European Vehicles Use with 061-0605</b></p>
 <p style="text-align: center;"><b>080-0593</b></p>	<p style="text-align: center;"><b>MQD X 1/4” MPT General Application Use with 080-0592</b></p>
	<p style="text-align: center;"><b>200-0062</b></p> <p style="text-align: center;"><b>Flush tool canister. Used to put flush chemicals into transmission cooler systems. (no dipstick trans.)</b></p>

 <p>011-5014</p>	<p>Adapter "sorter" rack for drain tray. (Standard equipment after Jan. 1,2006 build date).</p>
	<p>FORD F-350 TORQSHIFT 1/2" male deep-flare  062-2071</p>
	<p>FORD F-350 TORQSHIFT 1/2" female deep-flare  062-2070</p>
	<p>062-2072  G.M. (CADILLAC CTS)</p>

## ORDERING PARTS

Parts for the unit may be ordered by calling  
Customer Service, have your model and serial numbers available:  
Call: 800/841-8810, 714/558-4822