














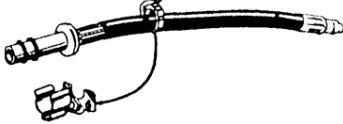
























CarbonClean 245 Standard Adapter Kit #200-3025A








Adapter	Part No.	Quantity	Application
	060-1000	2	GENERAL APPLICATIONS UTILIZING 1/4" FUEL LINE - MALE. (USE WITH SUITABLE HOSE CLAMPS.)
	060-1100	2	GENERAL APPLICATIONS UTILIZING 5/16" FUEL LINE- MALE. (USE WITH SUITABLE HOSE CLAMPS.)
	060-1200	2	GENERAL APPLICATIONS UTILIZING 3/8" FUEL LINE - MALE. (USE WITH SUITABLE HOSE CLAMPS.)
	060-1300	2	GENERAL APPLICATIONS UTILIZING 1/4" FUEL LINE - FEMALE. (USE WITH SUITABLE HOSE CLAMPS.)
	060-1400	2	GENERAL APPLICATIONS UTILIZING 5/16" FUEL LINE - FEMALE. (USE WITH SUITABLE HOSE CLAMPS.)
	060-1500	2	GENERAL APPLICATIONS UTILIZING 3/8" FUEL LINE - FEMALE. (USE WITH SUITABLE HOSE CLAMPS.)
	060-1700	1	CARBURETED VEHICLES WITH 5/16" FLARE FUEL INLETS. USE WITH 060-3304 FOR SOME FUEL INJECTED VEHICLES - RETURN LINE.
	060-1800	1	CARBURETED AND EARLY FUEL INJECTED VEHICLES WITH 3/8" FLARE FUEL INLETS.
	060-2501	1	FORMS "TANK TO TANK" LOOP ON ALL VEHICLES. USED TO EXTEND VEHICLE'S RETURN LINE DURING DIAGNOSTICS.
	060-2800	1	1/4" MALE. LATE MODEL VEHICLES TBI AND/OR PORT FUEL. (GM-CHRYSLER-JEEP/EAGLE).
	060-3100 (080-3402 O-Ring)	1	TBI AND/OR PORT FUEL PRESSURE LINE - MALE. G.M. VORTEC M16 x 1.5

	060-3105	1	TBI AND/OR PORT FUEL PRESSURE LINE - FEMALE. G.M. VORTEC M16 x 1.5
	060-3300 (080-3302 O-Ring)	1	TBI AND/OR PORT FUEL RETURN LINE - MALE. G.M. VORTEC M14 x 1.5
	060-3305	1	TBI AND/OR PORT FUEL RETURN LINE - FEMALE. G.M. VORTEC M14 x 1.5
	060-3500 080-3402 O-Ring, 080-3501 Clip)	1	3/8" MALE SPRING LOCK WITH CLIP (GREY). PORT FUEL-RETURN LINE. (USE AS PRESSURE LINE ON SOME RANGERS AND BRONCOS)
	060-3505	1	3/8" FEMALE SPRING LOCK. PORT FUEL - RETURN LINE. (USE AS PRESSURE LINE ON SOME RANGERS AND BRONCOS)
	060-3600 (080-3602 O-Ring, 080-3601 Clip)	1	1/2" MALE SPRING LOCK WITH CLIP (BLACK). PORT FUEL - PRESSURE LINE. FORD
	060-3605	1	1/2" FEMALE SPRING LOCK PORT FUEL - PRESSURE LINE. FORD
	060-3901 (080-3904 Clip)	1	3/8" QUICK DISCONNECT PORT FUEL AND TBI
	060-4200	1	5/16" MALE TBI AND/OR PORT FUEL (GM-CHRYSLER-JEEP/EAGLE).
	060-4300	1	3/8" TBI AND/OR PORT FUEL (GM-CHRYSLER-JEEP/EAGLEFORD).
	060-3902	1	1/4" FEMALE TBI AND/OR PORT FUEL (GM-CHRYSLER-JEEP/EAGLEFORD).
	060-4501	1	TEE ADAPTER FOR SINGLE LINE FUEL INJECTION SYSTEMS
	060-0440	2	HOSE CLAMPS. USE WITH 060-1000 THROUGH 060-1500.
	060-0450	2	HOSE CLAMPS. USE WITH 060-1000 THROUGH 060-1500.

CarbonClean 245 Deluxe Adapter Kit #200-3026A

Adapter	Part No.	Quantity	Application
	060-1600	1	12MM BANJO FITTING CIS OR EFI SYSTEMS. IN CONJUNCTION WITH 060-1900, 060-1901, 060-1902.
	060-1602	1	12MM 90° BANJO FITTING CIS OR EFI SYSTEMS. IN CONJUNCTION WITH 060-1900, 060-1901, 060-1902
	060-2402	2	14MM BANJO FITTING BMW AND LATE MODEL VW PRESSURE LINE.
	060-3304 (080-3302 O-Ring)	1	USED WITH MV0601700 TBI AND/OR PORT FUEL RETURN LINE – MALE M14 x 1.5
	060-3400 (080-3402 O-Ring)	1	USED WITH 060-1800 TBI AND/OR PORT FUEL RETURN LINE – MALE M16 x 1.5
	060-3508	1	"TEST PORT/SCHRADER VALVE" CONNECTION - FORD. NOTE: THE SCHRADER VALVE CORE MUST BE REMOVED.
	060-3700 (080-3701 Viton Seal)	1	"TEST PORT/SCHRADER VALVE" CONNECTION - GM.
	060-3900 (080-3903 Clip)	2	5/16" QUICK DISCONNECT PORT FUEL AND TBI FORD 5 LITER
	060-3901 (080-3904 Clip)	1	3/8" QUICK DISCONNECT PORT FUEL AND TBI
	060-4300	1	3/8" TBI AND/OR PORT FUEL (GM-CHRYSLER-JEEP/EAGLE).
	060-1900 (Bolt) 060-1901 (Washer) 060-1902 (Nut)	2 6 2	CONNECTS 12MM BANJO FITTINGS FOR DIAGNOSTICS AND/OR CREATING A LOOP.
	060-2740 (Bolt) 060-2741 (Washer) 060-2742 (Nut)	1 3 1	CONNECTS 14MM BANJO FITTINGS FOR DIAGNOSTICS AND/OR CREATING A LOOP

CarbonClean 245 Optional Adapters

Adapter	Part No.	Quantity	Application
	060-4800/ Male Side	1	Late Model Mitsubishi Products (Also includes Chrysler Imports, various Kia, Suzuki, & Hyundai Gas Powered Models)
	060-4805 / Female Side	1	Late Model Mitsubishi Products (Also includes Chrysler Imports, various Kia, Suzuki, & Hyundai Gas Powered Models)
	060-2310 / Female Side	1	"Bubble Flare" Type Adapter / 14 mm x 1.5 Common Applications Include: Mercedes-Benz, Volkswagen, Audi, & others with C.I.S. Fuel Injection Systems
	060-2315 / Male Side	1	"Bubble Flare" Type Adapter / 14 mm x 1.5 Common Applications Include: Mercedes-Benz, Volkswagen, Audi, & others with C.I.S. Fuel Injection Systems
	060-2325 / Male Side	1	Japanese / Toyota 14 mm x 1.5 Flare Type Adaptor (Pressure Side)
	060-3101 / Male Side (080- 3402 O- Ring)	1	2000 & Newer Nissan Products (Includes Nissan Quest & Maxima)
	060-3102 / Female Side	1	2000 & Newer Nissan Products(Includes Nissan Quest & Maxima)
	060-2300	1	17MM WRENCH SIZE WITH 14MM THREADS - EUROPEAN CARS INLET AND/OR RETURN. MAY BE USED WITH 060-2700. CIS SYSTEMS, MERCEDES, AUDI A-6
	060-2600	1	19MM WRENCH SIZE WITH 16MM THREADS - EUROPEAN CARS INLET AND/OR RETURN. MAY BE USED WITH 060-2700.
	060-2700	1	14MM X 16MM UNION. USE IN CONJUNCTION WITH 060-2300 AND 060-2600 FOR CIS APPLICATIONS.